# **Product Information Packet**

# Model TLC-702HC

Heat/Cool Solid State Liquid Chiller

with Integral TC-3300 Temperature Control

Part #6-A0D2-1-000

Thank you for your purchase. Information has been inclosed regarding the installation, specifications, and wiring af your solid state assembly.

Please read and follow all instructions carefully before installation. Only qualified technicians should install this equipment.

If you have any questions with your equipment, please do not hesitate to call us toll free at (888) TECA-USA (832-2872), we will be happy to assist. We are open from 8:00 am to 4:30 pm Central Time.

Included in this packet you will find:

Getting Started

Product Literature and Specifications

Wiring Drawing # SK991207

Temperature Control Literature Set-Up and Communications Information

Warranty Information

TC-3300 Manual



ThermoElectric Cooling America Corporation • 4048 W. Schubert Ave. • Chicago IL (USA) 60639 Phone: 773-342-4900 Fax: 773-342-0191 • www.thermoelectric.com • teca@thermoelectric.com

# GETTING STARTED:

(Read entire instructions before operating)

STEP #1 This unit should operate with the bottom feet resting on a flat surface. The internal heat exchanger is cooled by a tubeaxial fan. It is necessary to keep the inlet/outlet air path free from any restrictions that may impede your cooling performance. A 6" minimum spacing from the rear of the unit to any obstruction is required. External tubing with insulation has been provided for a total of 12' plumbing line. Trim the tubing and insulation as necessary to minimize the ambient thermal load. 4 clamps have been provided to attach the tubing (2 to the quick connectors provided and 2 for your load connectors). The tubing lines are a 3/8" inner diameter. Connect the external plumbing lines to the device(s) being cooled.

STEP #2 Low fluid and low flow indicators have been provided on the front panel. It is necessary to fill the internal reservoir before you apply power. <u>FAILURE TO DO SO MAY RESULT IN DAMAGE TO THE PUMP</u> The internal reservoir holds approximately 500 ml of fluid. The "add fluid" light will come on when the reservoir is approximately ½ full. There is a visual indicator of the water level on the side of the unit. Distilled water is the recommended fluid for temperatures to 5EC. For temperatures below 5EC, a 30% glycol 70% distilled water mix is suggested. Remove the reservoir cap located at the top left corner of the unit and fill the reservoir. Keep the reservoir cap off until the external plumbing is filled and the reservoir is topped off.


STEP #3 Connect the power cord to an appropriate outlet. The power cord must be connected to a receptacle protected by a circuit protected per local and or national codes. While you are filling the external lines, position the supply quick connect upwards. (See Figure A) This will assist in removing air trapped in the lines. At this point, depress the power switch on the front panel to turn the system on. For a 12' plumbing line, it should take about 30 seconds before the "add fluid" light illuminates. At this point, turn the power off and add additional fluid. Re-apply power. Another 30 seconds or so should be enough time to completely fill the lines. Turn off the power switch and top off the reservoir. Reattach the reservoir cap securely.


Please Note: It may be necessary to add fluid to the reservoir from time to time. The "add fluid" indicator will illuminate if the reservoir requires a refill. If the "low flow" indicator light appears, check to see if there are any obstructions or leaks within the plumbing lines.

The "low flow" indicator appears when the flow is approximately 0.3 liter/min or less.

STEP #4 A digital temperature controller has been provided. Hold the \* button and adjust ?> to adjust the set point. More detailed temperature control information has been included with your product information packet. We suggest changing the temperature controllers programming to a PID control method and then performing an autotune for better temperature control.


We hope you enjoy your new Ameritemp<sup>™</sup> series liquid chiller. If you have any questions, please do not hesitate to call our technical department @ 888-TECA-USA (888-832-2872).

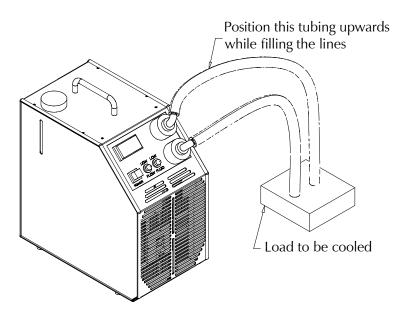


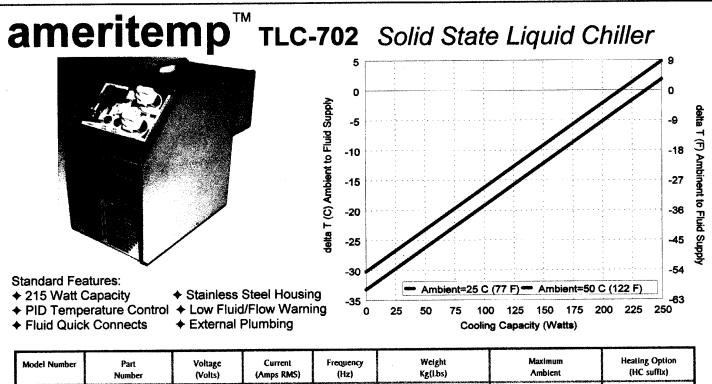

Model Number	Part Number	Voltage (Volts)	Current (Amps RMS)	Frequency (Hz)	Weight Kg(Lbs)	Maximum Ambient	Heating Option (HC suffix)
TLC-702 TLC-702HC	6-A0D2-0-000 6-A0D0-1-000	240 VAC	2.9	\$0/60	(3.6(30)	50°C(+l22°F)	200 Watt
Control Stability	Control	Housing	Liquid Jacket	Reservoir Capacity	Pump Flow Max Pressure	External Plumbing Provided with Shipment	Size (Inches)

**TECA's** Ameritemp<sup>™</sup> Series Chillers are a compact and reliable alternative to conventional recirculating coolers. A complete integrated package is now offered in a standard configuration. Precise temperature control and external plumbing lines with quick connectors are included with our base model. Options such as heating, RS-232 interface & Computer Communications software are offered as well. The Ameritemp<sup>™</sup> is ideal for bench-top or portable applications such as laboratory, laser, x-ray, out-patient and medical therapy as well as many others.

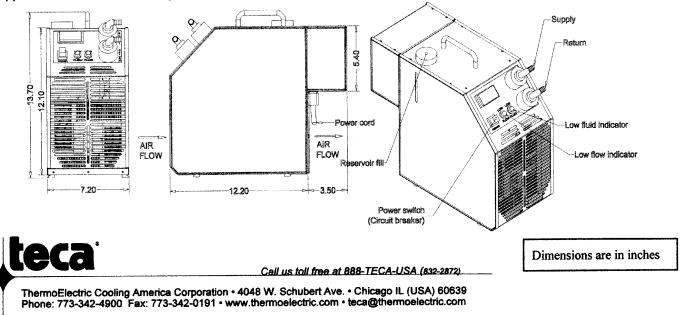

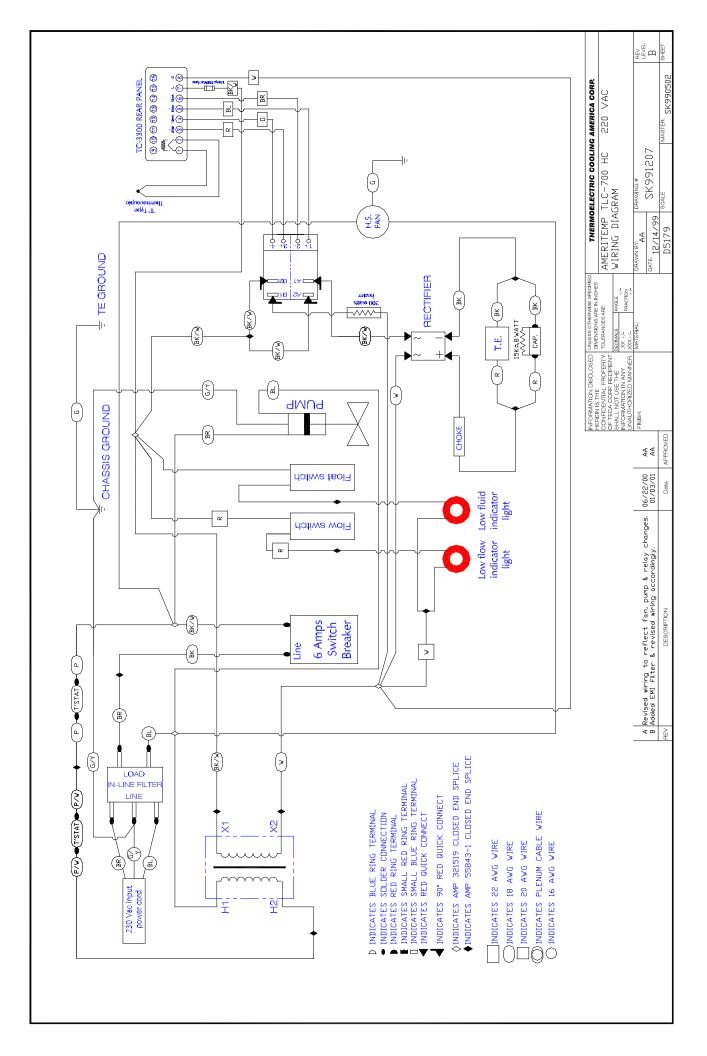

# **Temperature Controllers**



## Featuring

Front panel display	000.0 Digital High Brightness Display
Operator lockout	Included
Ramp/Soak	Included
Туре	P.I.D.
Auto tuning	Included
Data retention	Included
Size (1/32 DIN)	2" w x 1.2" h x 4.57" d
Weight	3.9 oz
Power Input	AC & DC Models
Sensor (Provided)	T-Type (6' Length cable)
Calibration Accuracy	+/- 0.25% of span +/- 1 LSD
Control Stability	Application Dependant Typically < +/- 1°C
Ambient Range	0-50°C (32-130°F)
Approvals (pending)	UL873, EN 61010, CSA 22.2 No. 1010.1-92
EMC Emission:	EN50081-1 FCC Rules 15 subpart J Class A
EMC Immunity:	EN50082-2
Sensor Range (T-Type)	-200°C to +250°C

## PC Compatible

Communications and communications software are available for PC supervision, offering remote adjustment, instrument configuration, cloning, saving and retrieving instrument settings to files together with logging and charting in real time.

To gain the full benefit of the COMMS software, it is recommended that the PC is fitted with a Pentium<sup>®</sup> Processor and is running Windows<sup>™</sup> 95/98 Windows<sup>™</sup> NT programs. A minimum of 16 Mb Ram is recommended, together with 20 Mb of hard disc space, to allow ample space for logging files.



Model 3300 is a digital, microprocessor based temperature controller designed to be used in conjunction with TECA heat pumps. When ordering a complete package, simply plug in the control cable and with factory preset tuning already provided, you are ready to go!

All models are designed with a Nema-4X front panel for corrosion and water resistance. This is ideal for applications such as food processing and food packaging, where equipment needs to be cleaned frequently. Features such as auto-tuning, dual output, and single input are available from these controllers. Each unit comes with factory default programming, but can be user modified through a setup menu.

#### Part Number

3	3	0	0	-	•	-	0	¤ ●
								⇔ (Standard)
▲ OU	TPUT							
0	Sing	le Out	put (Co	ool On	ly)			¢
1	Dua	l Outp	ut (Co	ol/Heat	t)			
O INF	υτ							
0	AC	Input 1	00-24	0 VAC				¢
1	DC	Input <sup>-</sup>	12-24 \	/DC				
• SOI	LID ST/	ATE RE	LAY					
0	*Ch inpu	Internal Relay(s) *Choose this option if ordering with AC input TECA units. Relay(s) are contained within the power supply.					\$	
1	Exte	External Relay(s) AC load (10 amp)						
2	External Relay(s) DC load (20 amp)							
¤ CO	MMUN	ICATI	ONS					
0	No	Comm	unicati	ions				\$
1	RS-2	232						
2	RS-4	485						
· ·	SOFTWARE (ORDER SEPARATELY) Windows™ Based, Includes Software Manual							
Part	t Numb	oer: 10	0-1GB-	-300				

Call us toll free at 888-TECA-USA (832-2872)

ThermoElectric Cooling America Corporation • 4048 W. Schubert Ave. • Chicago IL (USA) 60639 Phone: 773-342-4900 Fax: 773-342-0191 • www.thermoelectric.com • teca@thermoelectric.com

# TC-3300 SET UP (ON/OFF STYLE)

To access the set up menu push and hold **UP** and **DOWN** buttons simultaneously for 3 seconds. Press and hold **UP** or **DOWN** button to navigate through the menu.

To change settings: Press and hold \* button, then use **UP** or **DOWN** buttons to enter new values. Press and hold **UP** and **DOWN** buttons simultaneously for 3 seconds to exit the set up menu. To set the main temperature: Press and hold \* button, then use **UP** or **DOWN** buttons to enter the new value.

#### LEVEL 1: tune

bAnd

int.t

dEr.t

dAc

cyc.t

oFst

sp.Lk

sprr

sprn soAk

sEt.2

bAnd.2

cyc.2

off

0.5

5.0

25

1.5

on.off

0

off

0

off

- -

0.2

0.5

on.off

## Output configuration

LEVEL 3:

ssd1 sp1.d sp2.d ssd2 burn 1u.2d 1r.2r rEu.d 1n.2n reu.L spAn 0.0 zEro 0.0 chEk off rEAd Var tEch ctA uEr (see note) nonE rsEt

LEVEL 4:

Lock	nonE
Prog	Auto
no.AL	on
dis.s	6
dEr.s	0.5

#### LEVEL C: COMMS menu

Addr	1
bAud	9600
dAtA	18n1
dbuG	off

### LEVEL 2:

#### Manual control modes

sp1.p	(as is)
hAnd	off
pL.1	100
pL.2	100
sp2.A	dv.hi
sp2.b	nonE
disp	0.1
hisc	70
Lo.sc	-10
inpt	tc t
unit	с

Note: "uEr" value is preset and can not be changed, however it provides access to LEVEL 4. Press and hold UP and DOWN buttons for 10 seconds to access LEVEL 4.

LEVEL C only visible when COMMS option fitted.

Set SP1 (main temperature set point) to 10 C.

Rev A: Changed SP1 from 25C to 10C.

11/02/99/AA

# TC-3300 SET UP (PID STYLE) FOR HEAT/COOL.

To access the set up menu push and hold **UP** and **DOWN** buttons simultaneously for 3 seconds. Press and hold **UP** or **DOWN** button to navigate through the menu. To change settings: Press and hold \* button, then use **UP** or **DOWN** buttons to enter new values. Press and hold **UP** and **DOWN** buttons simultaneously for 3 seconds to exit the set up menu. To set the main temperature: Press and hold \* button, then use **UP** or **DOWN** buttons to enter the new value.

LEVEL 1:	
tune	off
bAnd	4.0
int.t	20
dEr.t	10
dAc	1.0
cyc.t	10
oFst	0
sp.Lk	off
sprr	0
sprn	off
soAk	
sEt.2	1.0
bAnd.2	4.0
cyc.2	10

LEVEL 3:

	onfigura	tion
Output	configura	
sp1.d	ssd1	
sp2.d	ssd2	
burn	1u.2d	
rEu.d	1r.2d	
reu.L	1n.2n	
spAn	0.0	
zEro	0.0	
chEk	off	
rEAd	Var	
tEch	ctA	
uEr	(see note)	
rsEt	nonE	

LEVEL 4:

Ξ
)

LEVEL C	LEVEL C:		
COMMS	menu		
Δddr	1		

Addr	1
bAud	9600
dAtA	18n1
dbuG	off

#### LEVEL 2:

#### Manual control modes

		í i
sp1.p	(as is)	
hAnd	off	
pL.1	100	
pL.2	100	
sp2.A	Cool	
sp2.b	nonE	
disp	0.1	
hisc	70	
Lo.sc	-10	
inpt	tc t	
unit	С	

Note: "uEr" value is preset and can not be changed, however it provides access to LEVEL 4. Press and hold UP and DOWN buttons for 10 seconds to access LEVEL 4.

LEVEL C only visible when COMMS option fitted.

Set SP1 (main temperature set point) to 10 C.

Rev A: Changed SP1 from 25C to 10C; added heat/cool to title. 11/02/99/AA



ThermoElectric Cooling America Corporation 4048 W. Schubert Avenue • Chicago, IL (U.S.A.) 60639 Ph: 773/342-4900 Fx: 773/342-0191 teca@thermoelectric.com www.thermoelectric.com

## **DECLARATION OF CONFORMITY**

#### TYPE OF EQUIPMENT

Electrical Heat Pump, Liquid Chiller, Solid State Cooling Device

#### BRAND NAME

**TYPE DESIGNATION** 

MANUFACTURER

YEAR OF MANUFACTURE

700, 702

TLC

Refer to the first two digits of the serial number on the manufacturers ID label

TECA Corporation 4048 W. Schubert Ave. Chicago, IL, 60639 U.S.A.

#### **APPLIED STANDARDS**

Application of Council directive: Standards to which conformity is declared:

Report number:

Low voltage directive Standards to which conformity is declared:

Report number:

Machinery Directive (89/336/EEC) EN61326:1997, Class A EN61326:1997, Industrial Location J20022721.011

73/23/EEC - European union (EU) EN61010-1-A1:97 EN61010-2-010-A1:97 J20022721.L01

#### **TESTING AGENCY**

ITS Intertek Testing Services ETL SEMKO

VP of Engineering Andy Brecklin

North

June 19, 2003

In the event a defect in material or workmanship is discovered in any of TECA's products within one year after the date they are delivered to Buyer, and if: (a) TECA is notified of the defect in writing by certified mail within 14 days of the date of discovery; (b) TECA may then either, at its sole discretion, inspect the product at Buyer's location, or require that the product be made available at Buyer's expense at TECA's premises for TECA's inspection within 14 days of the date of notification; and (c) the products are defective and the defects result from faulty materials and/or workmanship and not in any way from accident, misuse, misapplication, mishandling, modification, or alteration by the Buyer or the shipper, then TECA shall, at its sole option, repair or exchange defective products free of charge to Buyer, or credit to buyer the price of the defective products. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, ARE EXCLUDED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL TECA BE LIABLE FOR ANY CLAIM BASED UPON BREACH OF EXPRESS OR IMPLIED WARRANTY OR ANY OTHER DAMAGES WHETHER SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, LOST PROFITS, BUSINESS INTERRUPTION, OR LOSS OF BUSINESS OR CUSTOMER **RELATIONSHIPS.** 

### RETURNED GOODS, RESTOCKING CHARGES

In order to return merchandise for any reason (repair, replacement, or credit) a return authorization number must be issued by TECA. New merchandise may not be returned for credit beyond 60 days from shipment. Charges for incidental or other damages may also be made. All returned goods must be sent freight prepaid. A restocking charge of 15% will apply. On special equipment and custom modified equipment orders, additional incremental cancellation charges may be made.